Superior Performance
Unbeatable Pricing
Pride in Workmanship
Energy Efficient
Rugged Construction



## TY/TYM Agitator

Manua I



# Content

1 · Introduction	
• Mode I	2
• Features	2
• Dimensions	3
• Dimension Chart	3
2 \ Prior to Start-up	4
3 Cautions in Running	4
4 \ Maintenance	4
5 \ Quality Quarantee	5



#### 1 \ Introduction

Mode I

$$\frac{\text{TY}}{(1)}$$
 -  $\frac{1}{(2)}$  -  $\frac{200}{(3)}$  -  $\frac{1}{(4)}$  -  $\frac{220}{(5)}$  -  $\frac{4}{(6)}$  -  $\frac{5}{(7)}$ 

(1) Type: TY - Fixed

TYM - Removable

(2) 1 - 1/4 HP

2 - 1/2 HP

3 - 1 HP

(3) RPM: 80-80RPM 200-200RPM

300-300RPM

(4) Phase:1-1Ø 3-3Ø (5) Voltage: 220-220V

380-380V 440-440V

(6) Material: 4 - SUS304

6 - SUS316

(7) Frequency: 5-50HZ

6-60HZ

#### Features


- 1.Gear reducer, impact and high reduction ratio.
- 2.Reducer and motor are connected by flange for long-turn running.
- 3. Tough structure, excellent sealing for gear box, no leakage.
- 4. Ideal for mixing chemicals and waste water application. Variable speed depending on applications.

2



3

## • Dimensions

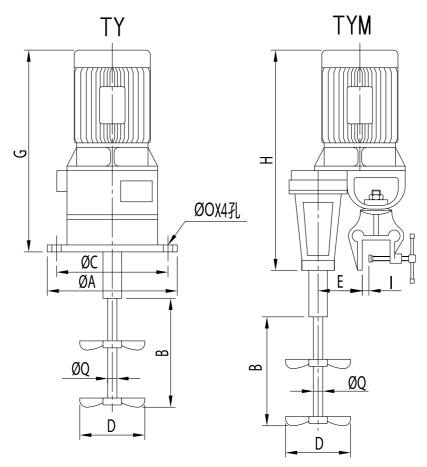

## • Dimension Chart

TYPE	₩	(Ø)	R. P. M	A	В	С	D	Е	F	G	Н	1	0	Q
TY-1, TYM-1	1/4	1, 3	80~300	160	1000	130	200	110	30	387	455	30	10	15. 87
TY-2, TYM-2	1/2	1, 3	80~300	160	1000	130	250	110	30	409	470	30	10	19.05
TY-3, TYM-3	1	1, 3	80~300	200	1000	165	300	130	50	452	565	30	12	22. 25



### 2 \ Prior to start-up

- Make sure all bolts are fastened.
- · Make sure the voltage before wiring.
- Power on to check the rotation clockwise from top.
- Make sure no tools left in the tank.
- · Take care vibration from the tank might bend the shaft.
- Overload protection switch is recommended.

## 3 Cautions in running.

- Never dry running.
- Shutdown to inspect if abnormal noise or heat appears.
- Make sure the current is not overload while running.
- Make sure the shaft and fins are straight. Bended shaft or fin will cause vibration or noise and malfunction consequently.
- Shutdown to check the shaft's turning, blots, mounting and solid in tank if vibration appears in running.
- Add solid into the tank gently and avoid to damage the shaft or fins.
- Set lower speed for sticky or higher specific gravity liquid.

#### 4 \ Maintenance

- Clean gear box and replace new lube oil after the first 100 hours running, and keep replacing new lube oil every 2,500 hours running or every 3 months. HD320 or the same grade lube oil are recommended.
- Contact Super for high temperature, high pressure and heavy load applications.

4



## **Quality Guarantee**

Model:

Serial No.:

All the SUPER GIANT products have passed strict quality control and fulfill the standard stated in our catalogue. They will run in excellent condition under proper operation and good maintenance.

- 1. Please store this guarantee properly and show it when necessary.
- 2. Super Giant Enterprise company will charge for repair under the following conditions.
- The damage is caused by non-permitted repair, or improper maintenance or operation.
- The product is broken by natural disasters such as earth quake or fire.
- 3. The consumable parts and accessories are not covered in the guarantee.
- 4. guarantee period: 1 year after delivery

Should you have any question, please contact our dealer or Super Giant Enterprise directly.

Address: No.7 Lane 404 Chung Cheng South Road, Yen Hang, Yung Kang, Tainan,

Taiwan, R.O.C.

Tel: +886-6-2534546 Fax:+886-6-2534226



Please kindly provide us the following information.

1. Chemical: Name/Concentration/Temperature/ Specific Gravity/Viscosity

2. Capacity needed:\_\_\_\_L/min

3. Head needed:\_\_\_\_\_M

4. Power: Voltage/Frequency

SUPER GIANT ENTERPRISE CO., LTD.
No.7, Lane 404, Chung Cheng South Road, Yen
Hang, Yung Kang, Tainan, Taiwan,
Tel:886-6-2534546, 2541601
Fax:886-6-2534226, 2420509
E-mail:super@superpump.tw
Website:http://superpump.tw
http://superpump.cn